


Design for Assembly

Alpha Beta Assembly Angles

Beta, (Direction of Insertion)
Beta Angle = 180 degrees

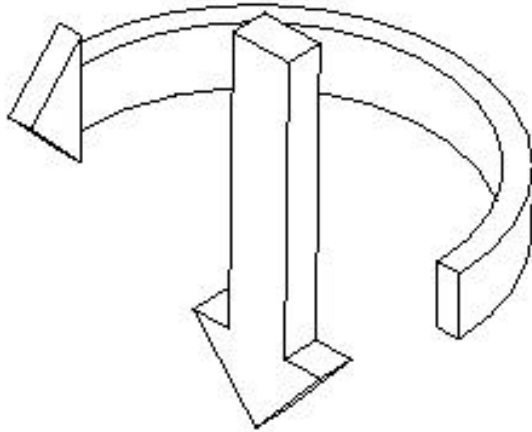

Alpha, (perp. to direction of insertion)
Alpha Angle = 360 degrees

